

 
 


Industrial Air Circulator Instructions

For All High Velocity Fans



READ AND SAVE THESE IMPORTANT INSTRUCTIONS

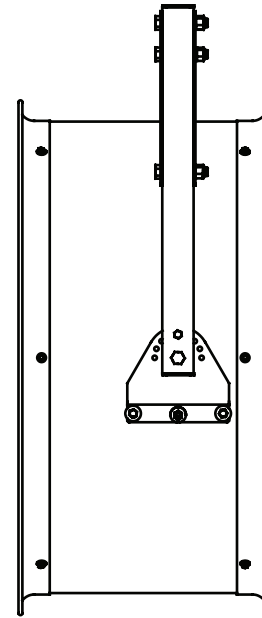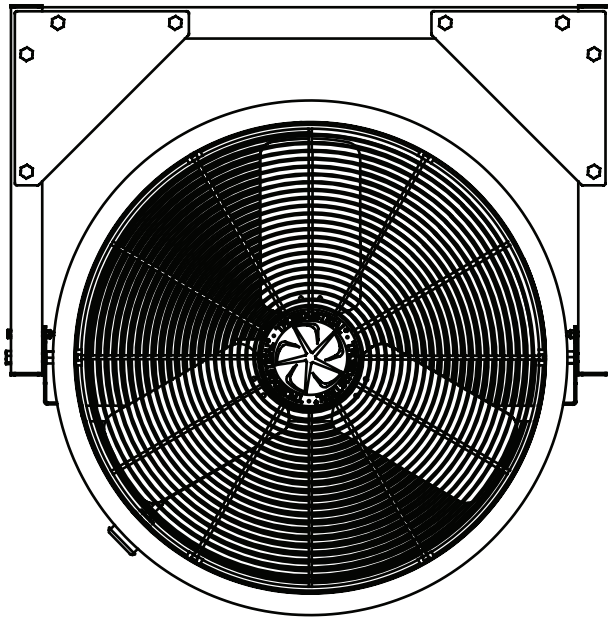

It is important that the following safety precautions be followed when using this product:

- DO NOT place foreign objects through guards into blades.
- DO NOT allow unit to become wet or damp.
- DO NOT use this fan with any solid state speed control device.

“NOT SUITABLE FOR USE WITH SOLID-STATE SPEED CONTROLS”

“AVERTISSEMENT; NE CONVIENT PAS A DES REGULATEURS DE VITESSE A SEMI-CONDUCTEURS”

- **WARNING:** To reduce the risk of fire, electrical shock, or injury to persons, observe the following: Use this unit only in the manner intended by the manufacturer. If you have questions, contact the manufacturer.
- Before servicing or cleaning unit, switch power off at service panel and lock service panel to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag to the service panel.
- Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
- When cutting into wall or ceiling, do not damage electrical wiring and other hidden utilities.

Avertissement: Pour reduire les risques d'incendie ou de choc electrique, ou de blessures, respectez les consignes suivantes:

Utiliser cette unite uniquement de la maniere prevue par le fabricant. Si vous avez des questions, contactez le fabricant. Avant de reparer ou nettoyer l'appareil, couper le courant au panneau de service et verrouiller a pevent sa remise en marche accidentelle. lorsque la moyenne de la deconnexion n'est pas bloque, fixez solidement un avertissement bien en evidence, comme une etiquette sur le panneau de service. Les travaux d'installation et decablage electrique doivent etre effectues par des personnes qualifiees conformement a tous les codes et normes applicables, y compris la construction par incendie. Lorsque vous coupez dans le mur ou le plafond, n'endommagez pas le cablage electrique et d'autres utilitaires caches.

 
INSTALLATION INSTRUCTIONS

For installation on wood structures, use a 1/2" lag screw of appropriate length for the application.

For installation on steel structures, use a 1/2" bolt of the appropriate length for the application, in combination with a flat washer, a lock washer and a 1/2" nut.

For installation on masonry structures, use a 1/2" lag screw, in combination with a lag shield, of appropriate length for the application.

In all cases, it is recommended that a flat washer be placed on both sides of the fan yoke to assist in smooth rotation.

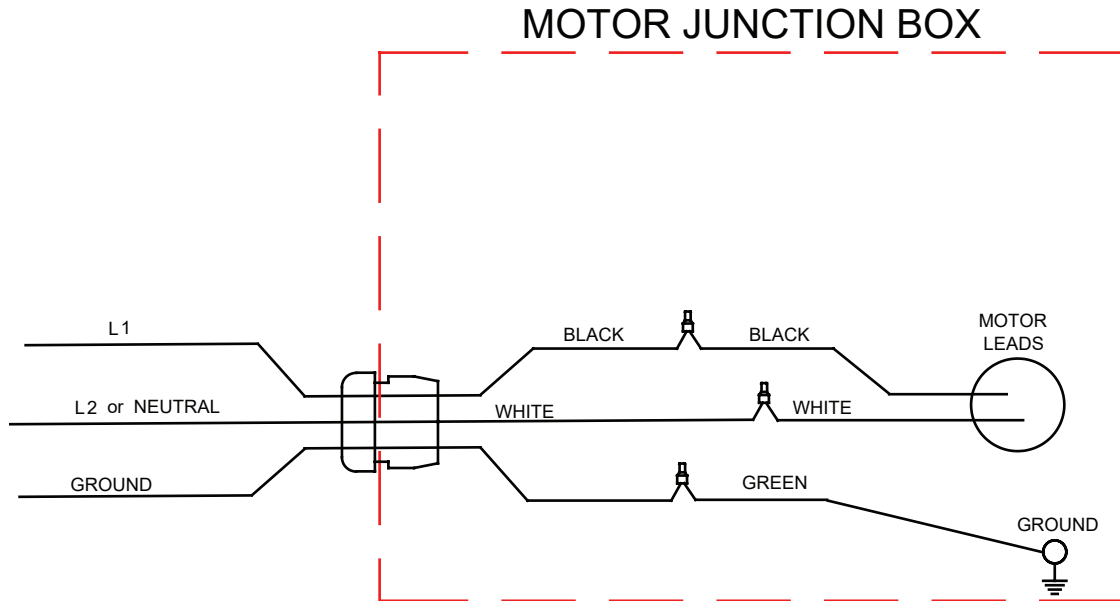

OPERATING INSTRUCTIONS

This unit is single speed fan and swivel bracket, which allows you to move the position to a desired air delivery. During normal operation it is not uncommon for the motor to be warm to the touch. The motor is equipped with a thermo-protector, and will automatically d-energize the fan if it were to over heat for any reason. If this should happen immediately disconnect unit from power.

CLEANING/MAINTENANCE INSTRUCTIONS




All maintenance should be done by either TPI Corporation or a qualified electrician. The motor bearings are lubricated at the factory and should not require any additional lubrication. However, if bearing lubrication is required, apply a small amount of a synthetic oil to the motor bearing.

Remove six retaining screws and the six grille clips on the outer ring. Remove front guard out and off to separate from the housing. Use mild detergent to clean the blade and guards. Avoid allowing cleanser to come in contact with the motor windings or bearing. Then replace front guard in reverse order of disassembly. Allow fan to dry completely before next use.




Save these important instructions. Your TPI Air Circulator carries a one year warranty. For additional information on TPI Products or replacement parts, call TPI Customer Service Department at 1-800-251-0382 or write the address below.

PO. Box 4973 • Johnson City, Tennessee 37602-4973 • 423-477-4131 • FAX 423-477-0683

   HV18

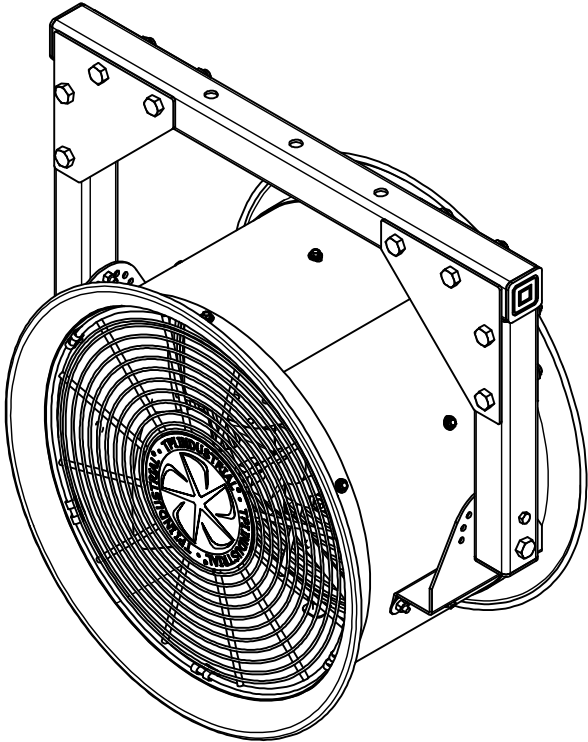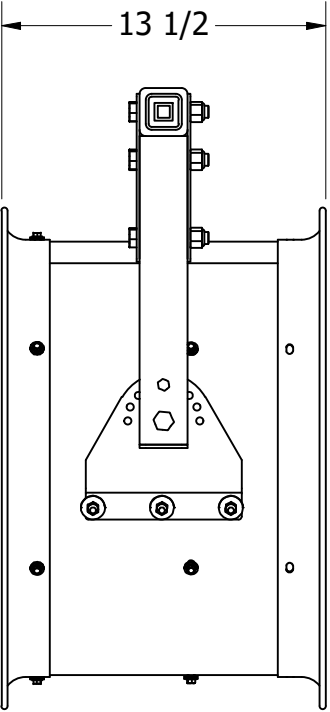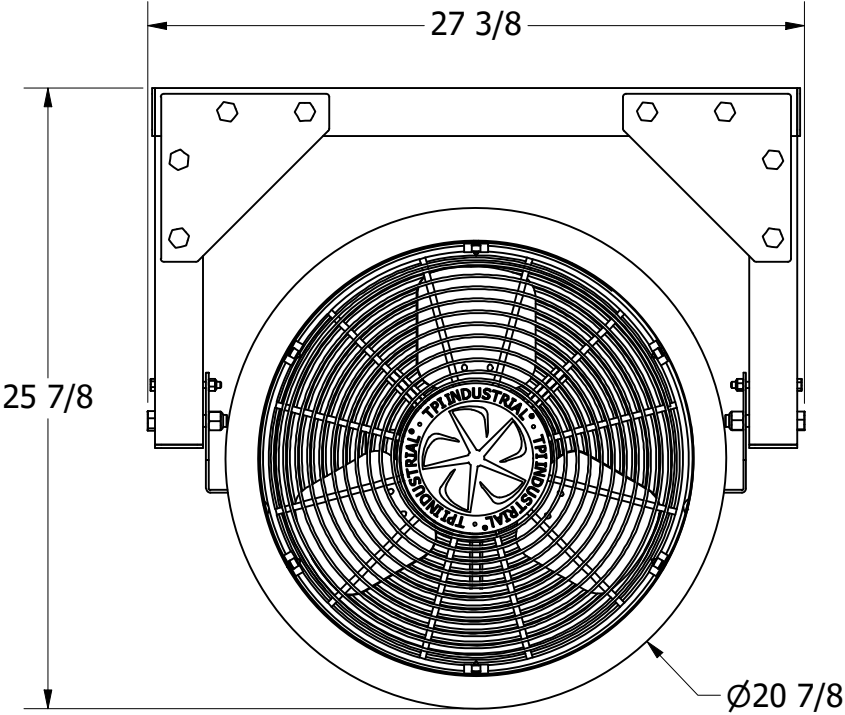

HV24

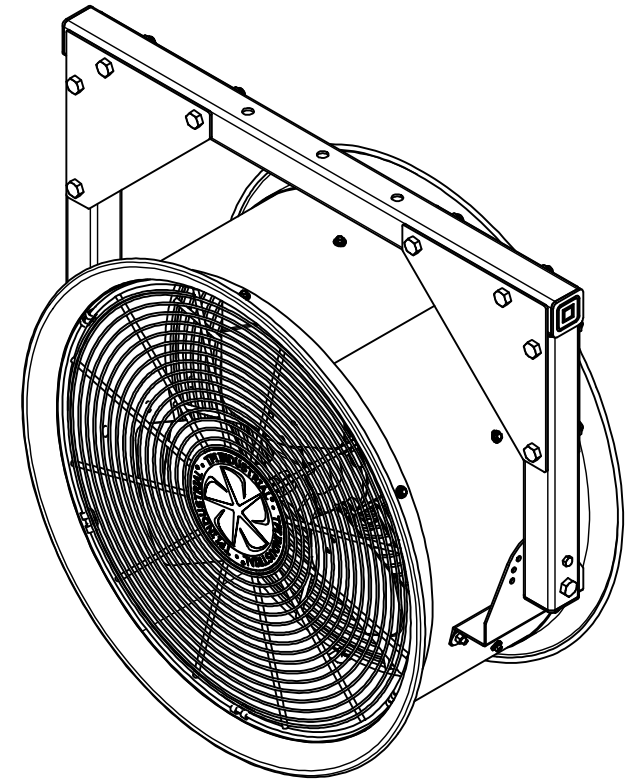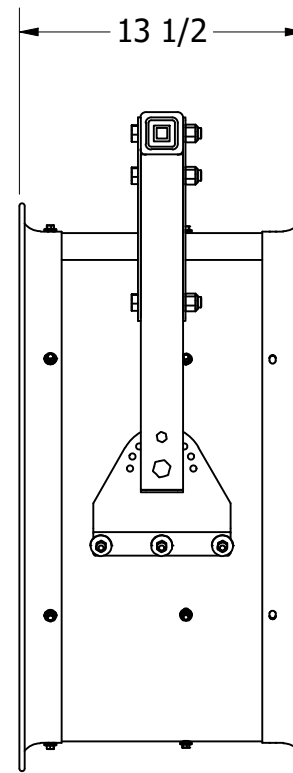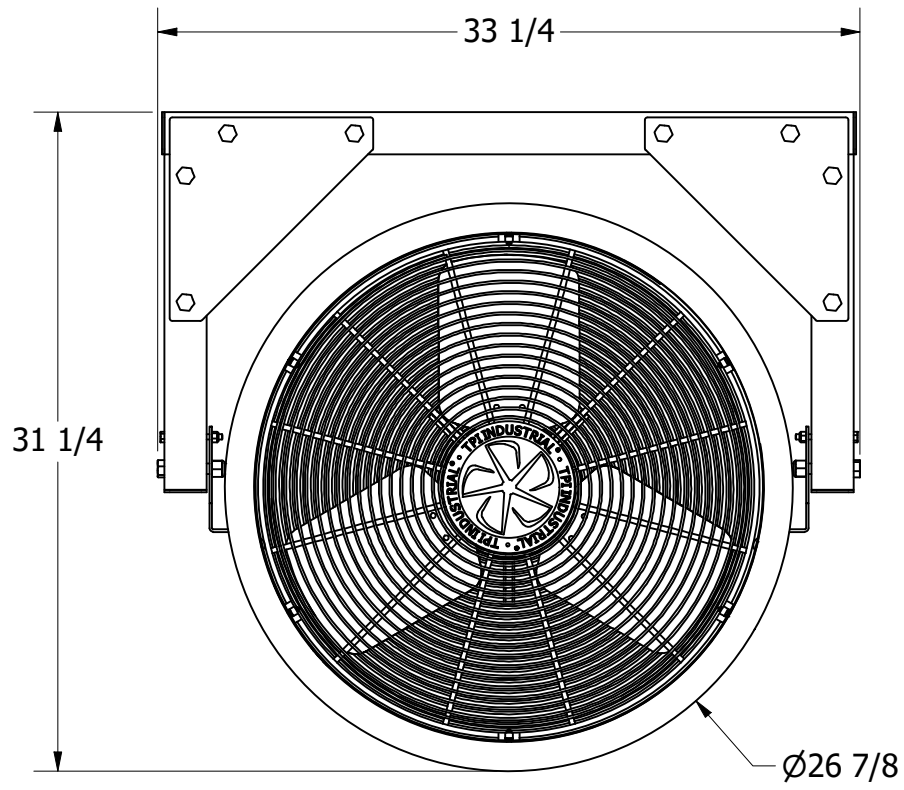   

HV30

